


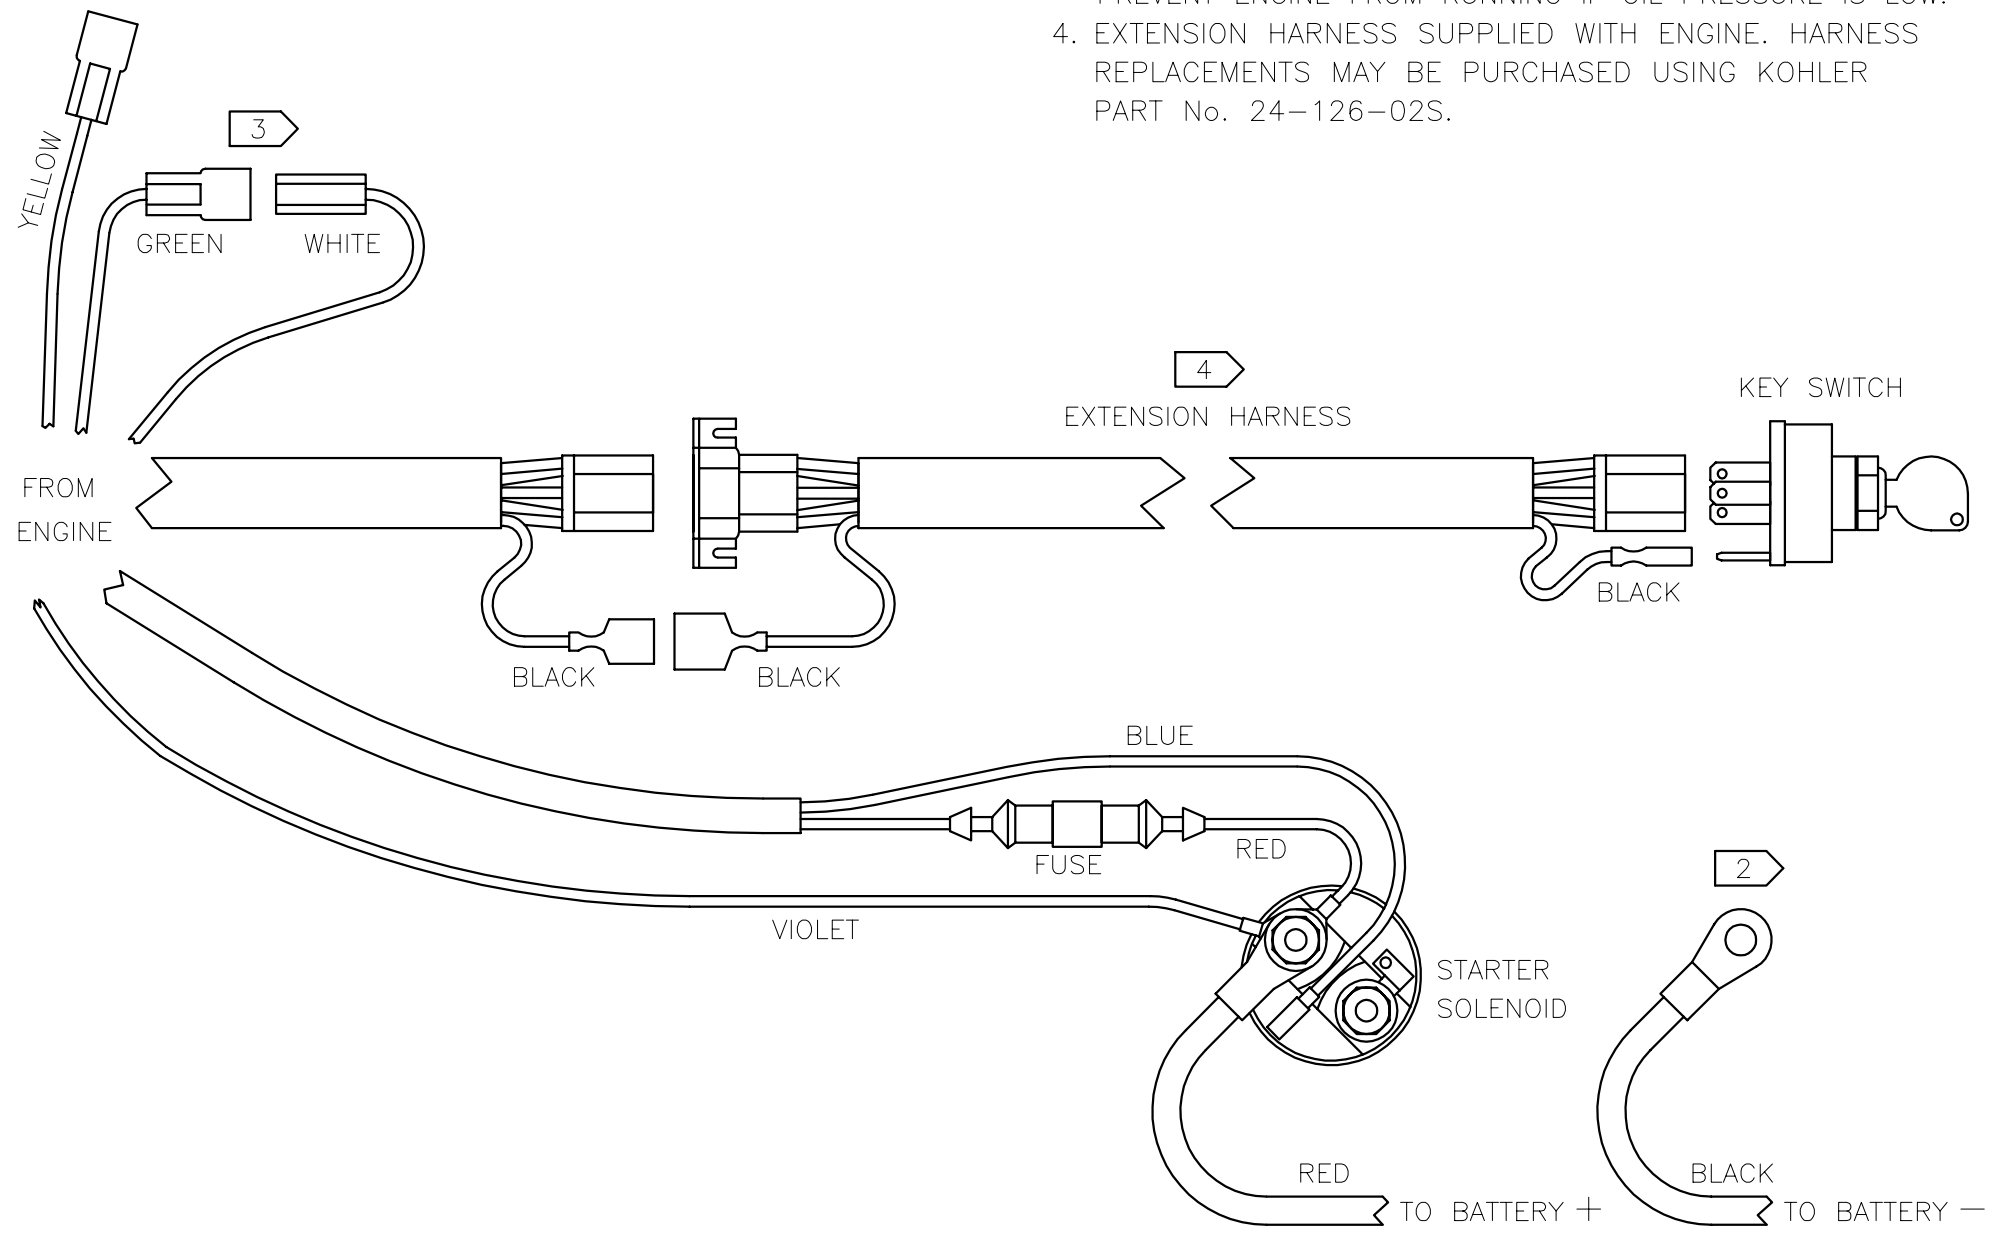

NOTE: THIS DRAWING AND THE INFORMATION CONTAINED THEREIN IS THE CONFIDENTIAL AND PROPRIETARY PROPERTY OF McElroy Manufacturing, Inc. THE DRAWING IS NOT TO BE REPRODUCED IN ANY MANNER, SUBMITTED OUTSIDE PARTIES FOR EXAMINATION, OR USED DIRECTLY OR INDIRECTLY FOR THE PURPOSES OTHER THAN THOSE FOR WHICH IT WAS FURNISHED WITHOUT WRITTEN PERMISSION OF McElroy Manufacturing, Inc.

- NOTES:
1. USE FOR KOHLER COMMAND CH18S ENGINE (MDA00034).
 2. BOLT NEGATIVE BATTERY LEAD TO ENGINE BLOCK.
 3. CONNECTING GREEN AND WHITE WIRES AS SHOWN WILL PREVENT ENGINE FROM RUNNING IF OIL PRESSURE IS LOW.
 4. EXTENSION HARNESS SUPPLIED WITH ENGINE. HARNESS REPLACEMENTS MAY BE PURCHASED USING KOHLER PART No. 24-126-02S.

NO CONNECTION



DRAWING REVISION HISTORY LISTING

PART NO: 1856001

DESCRIPTION: #412/#618 KOHLER ENGINE WIRING DIAGRAM

<u>APPR.</u>	<u>REV</u>	<u>DATE</u>	<u>BY</u>	<u>DESCRIPTION OF REVISION</u>
LAA	A	7/19/02	ALK	REVISED TO ADD NOTE 4 TO CLARIFY REPLACEMENT PARTS.
BEA	B	6/6/07	MAC	ADDED VIOLET WIRE AS B+ TO ENGINE CHARGING SYSTEM. ADDED VIEW OF NEGATIVE BATTERY CABLE WITH FLAG TO NOTE 2. ADDED NOTE 3 AND NOTE 4 FLAG TO FIELD OF DRAWING.